 


Shackle Inspection

How to inspect before use

Ensure your safety, the safety of your site and teammates when conducting inspections. All inspections of Shackles shall be conducted in accordance with the relevant standards.

Inspect all the components of the Shackle thoroughly





2. Body, Blank & Threaded Hole



3. Pin



what to look for

Bent, Corroded, Cracked, Cut, Deformed, Distorted, Gouged, Heat Damage, Nicked, Squashed, Twisted, Unreadable, Worn.

NOTE: Pay particular attention to the load points for signs of wearing.

If any doubt is raised regarding the Shackle NOT being fit for service, tag accordingly and contact us on 3801 6565.

HEAD OFFICE

A. 4 Christensen Rd, Yatala Q 4207T. 07 3801 6565W. stenhouselifting.com.au

EAGLE FARM 07 3473 2453 **MARYBOROUGH** 07 4122 1193 **WACOL** 07 3728 4545



